


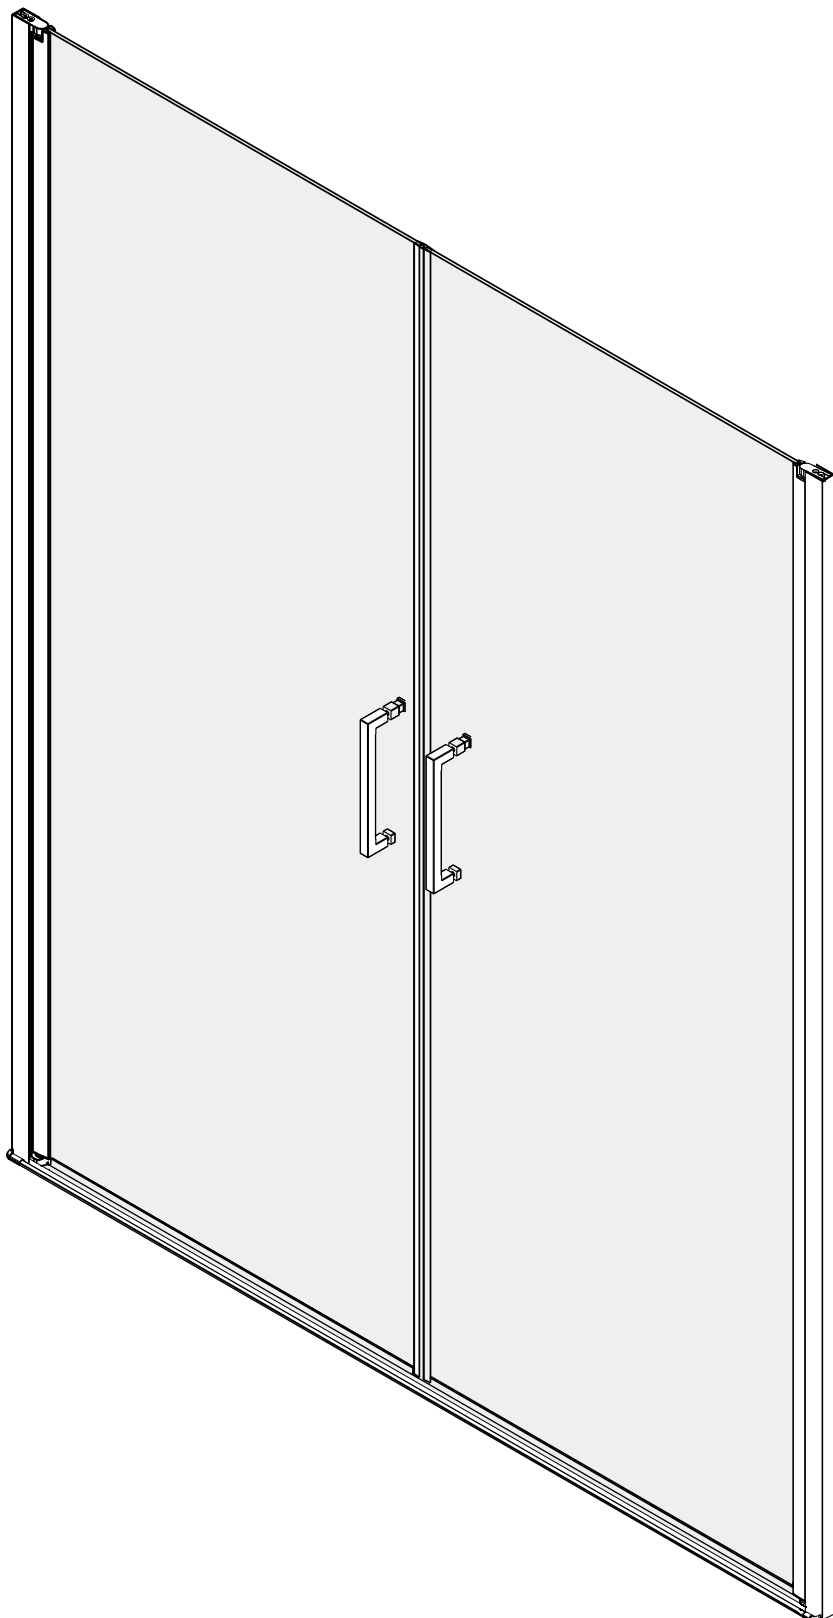


ALU CONCEPT 442

ac
AQUA CONCEPT®

Schaarbeekstraat 34
9120 Melsele
Belgium
t. 00 32 3 296 03 03
info@aquaconcept.eu
www.aquaconcept.eu


CONTENU / PARTS LIST

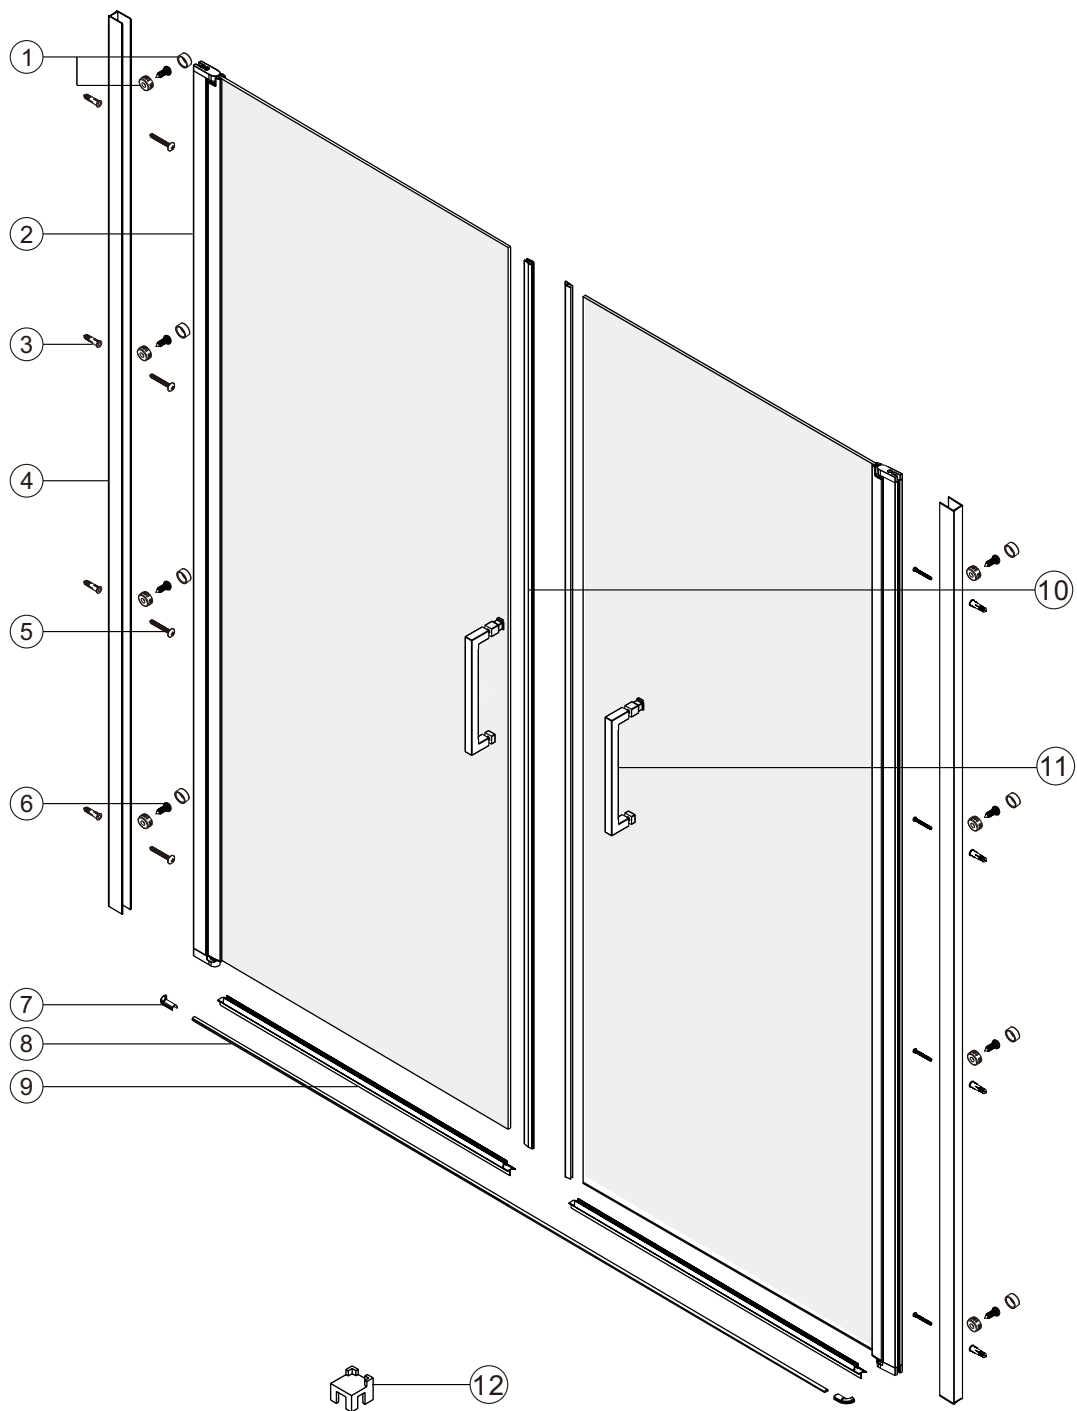

NO	Qty	Description	NO	Qty	Description
1	8	Chrome Screw cap	8	1	Chrome back splash
2	2	Clear Door	9	2	Back splash gasket L/R
3	8	Wall anchor	10	2	6mm gasket
4	2	Chrome Wall Chanel	11	2	Handle
5	8	ST4X40 Screw	12	4	Glass installation tool
6	8	ST4X16 Screw			
7	2	Chrome bracket for threshold L/R			


SUITE / CONTINUED

A 01

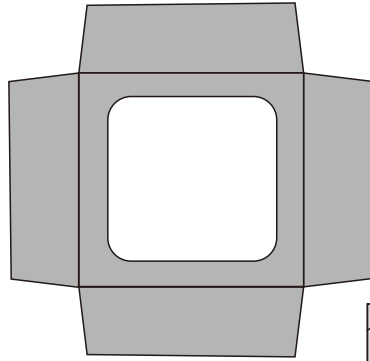


Pour protéger le FINI de votre base de douche.
To protect your shower base finish.

20~30mm

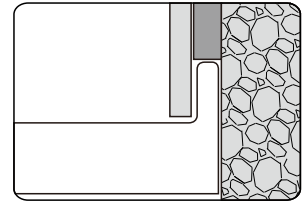

ATTENTION !
Attendre 24h avant d'installer votre porte de douche, afin de permettre au mortier et à la finition de sécher complètement.


WARNING !
Wait 24h before proceeding with the installation of the shower door. This will ensure that the finish and mortar is dry.

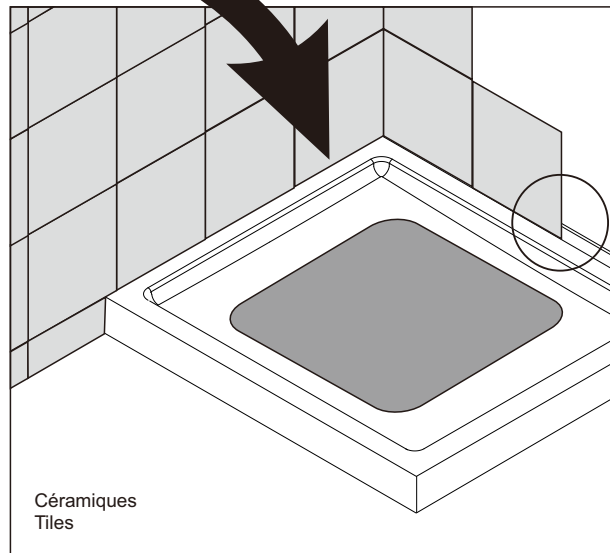

INSTALLATION EXTRUSION MURALE / WALL JAMB INSTALLATION






A 02

SIZE	A
800mm	770~800mm
900mm	870~900mm
1000mm	970~1000mm

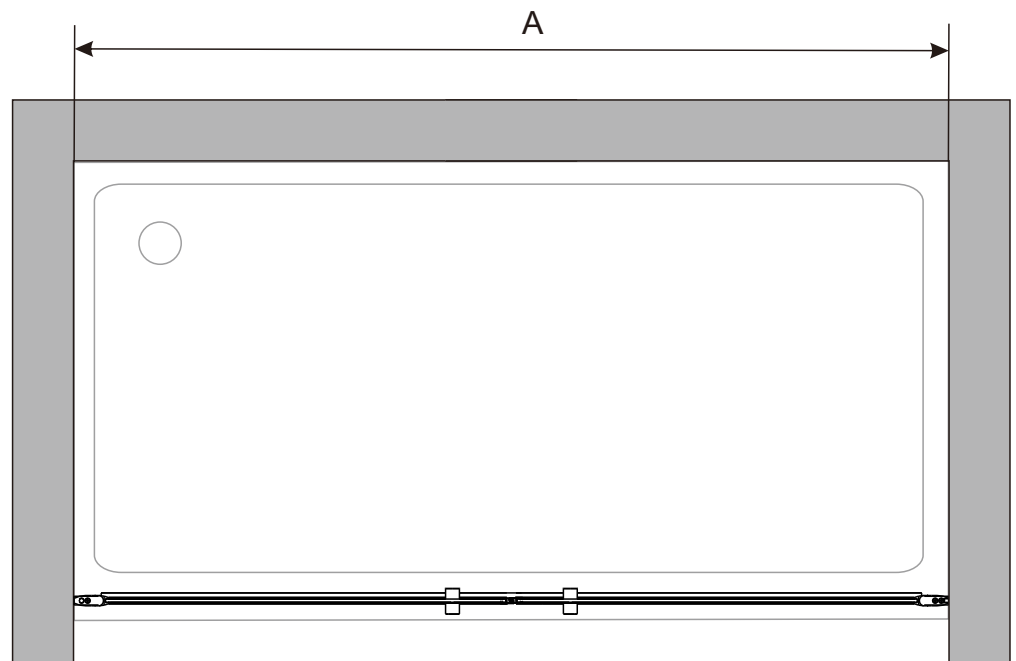




SUITE / CONTINUED

A 03

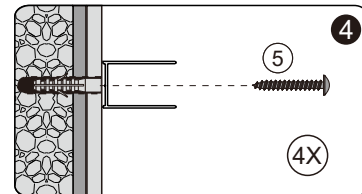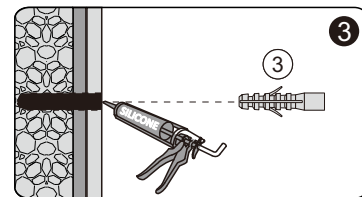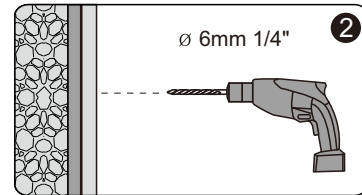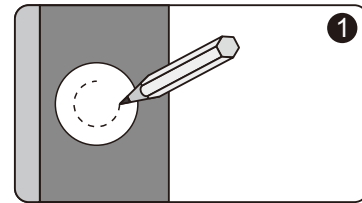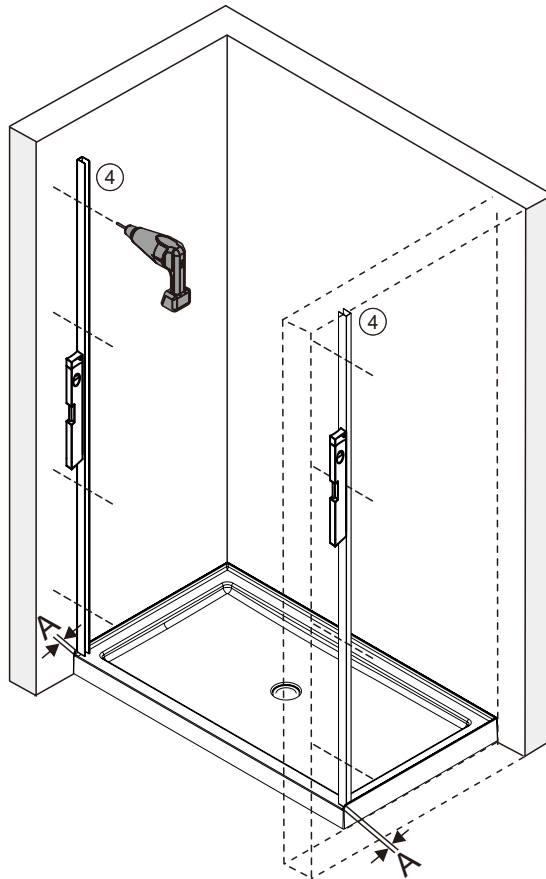


SUITE / CONTINUED


A 04

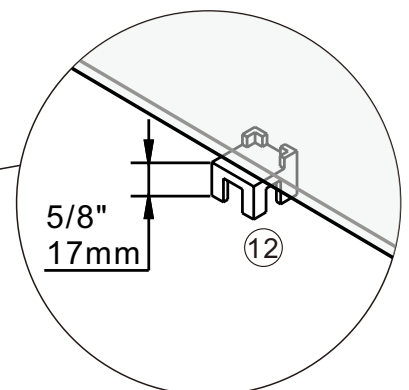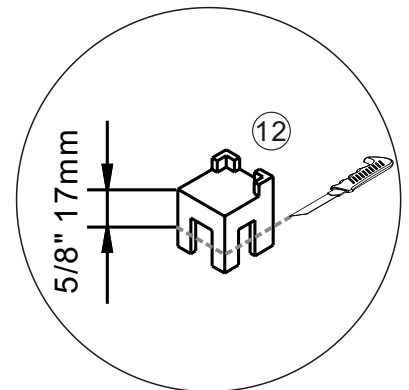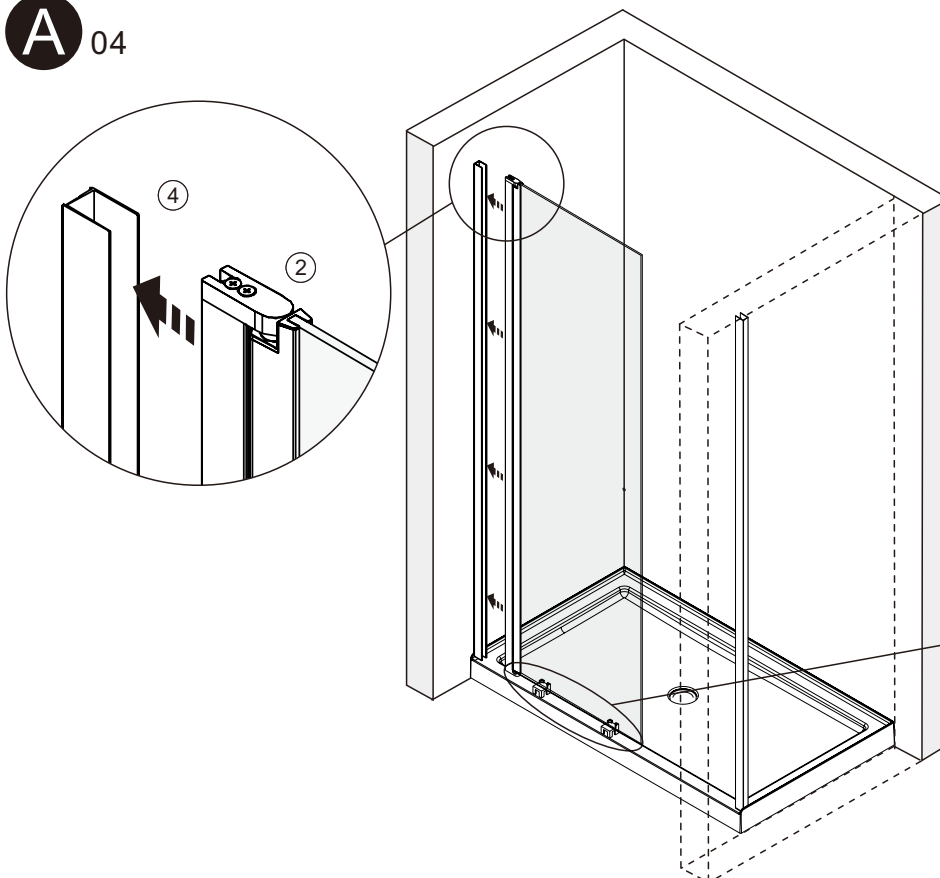

A₀₅

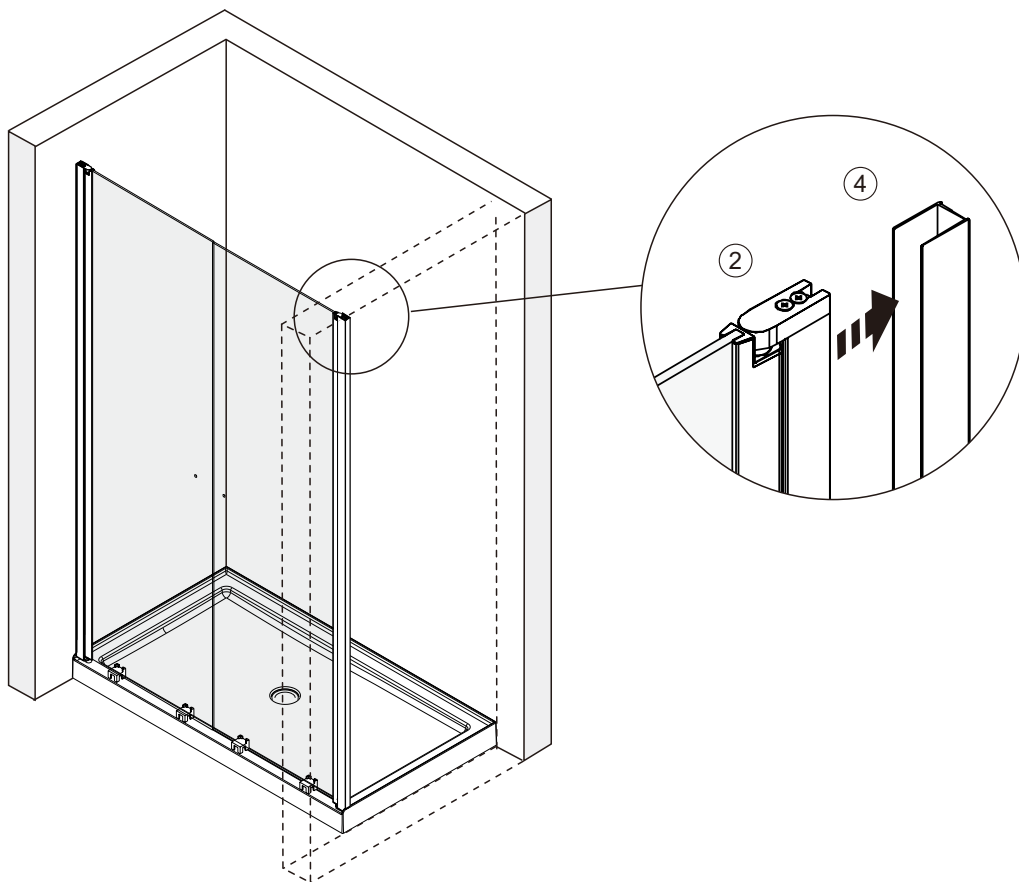


A₀₆

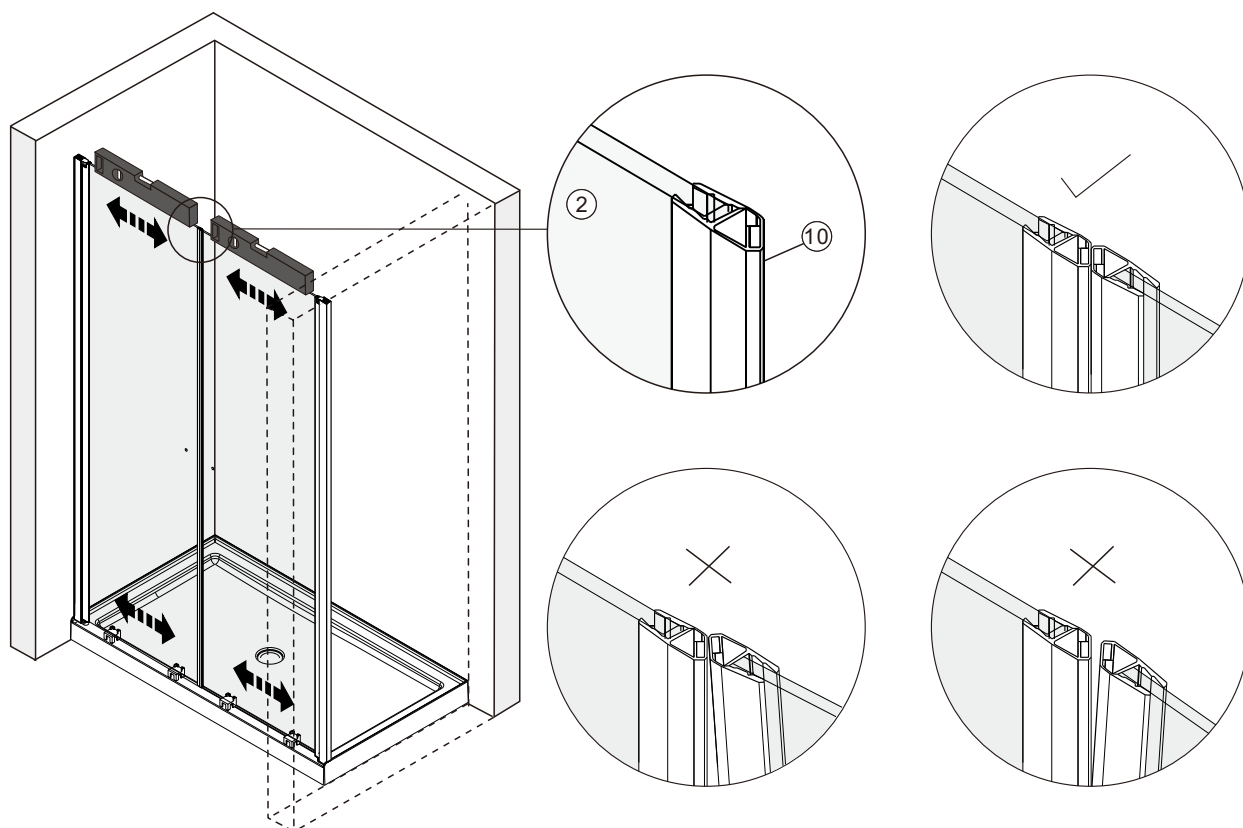


SUITE / CONTINUED

A 07

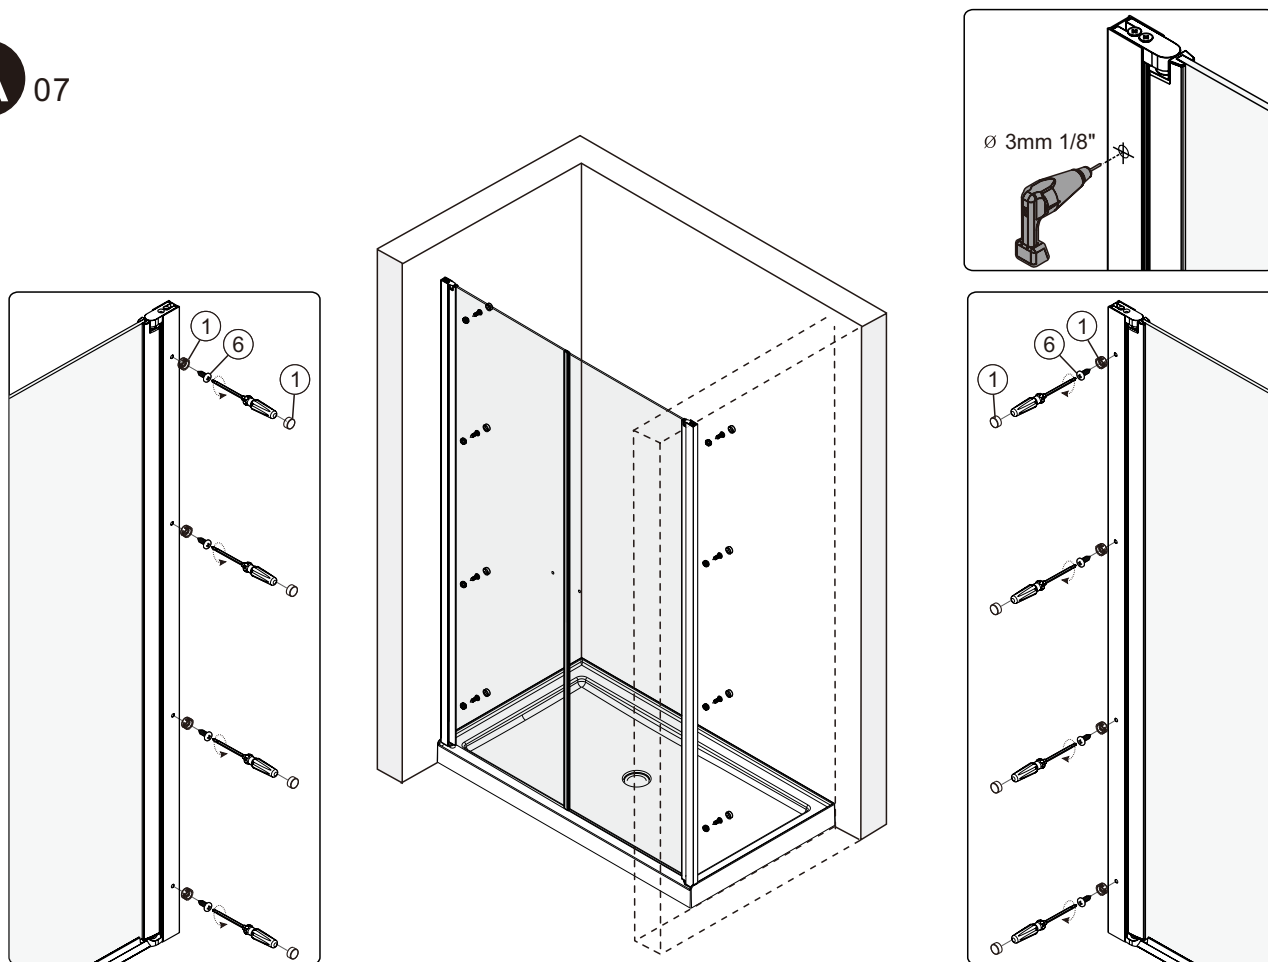



SUITE / CONTINUED

A 08

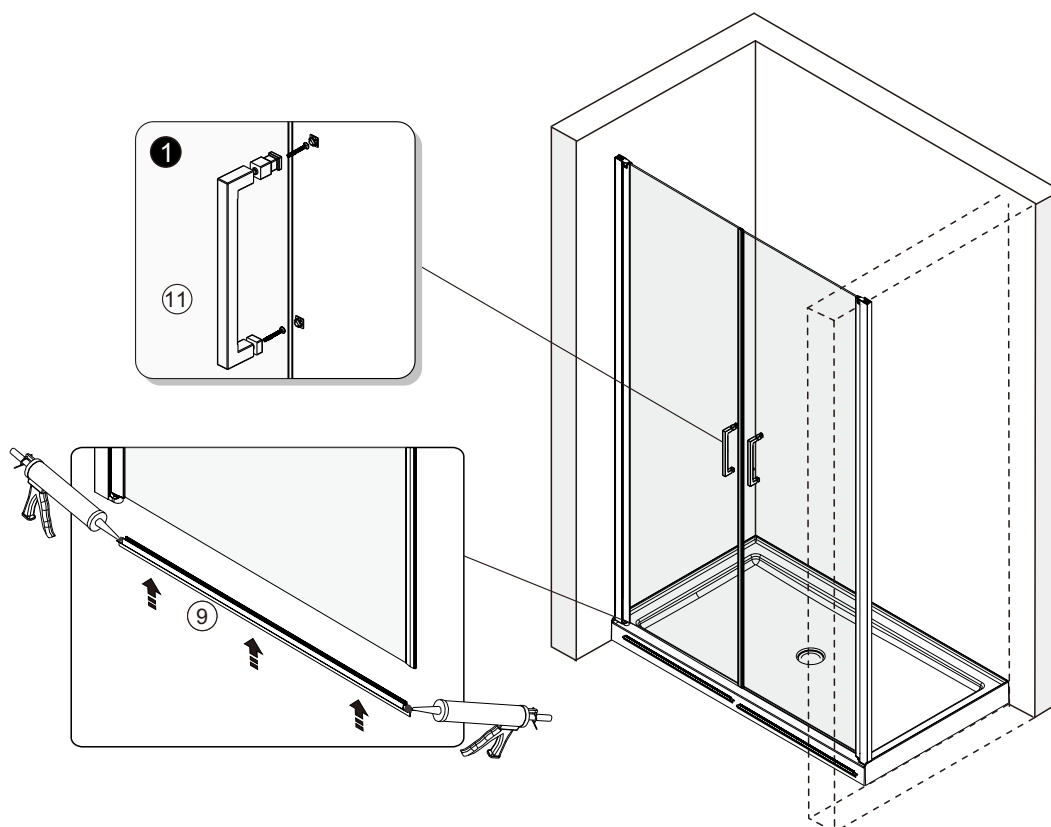

SUITE / CONTINUED

A 09

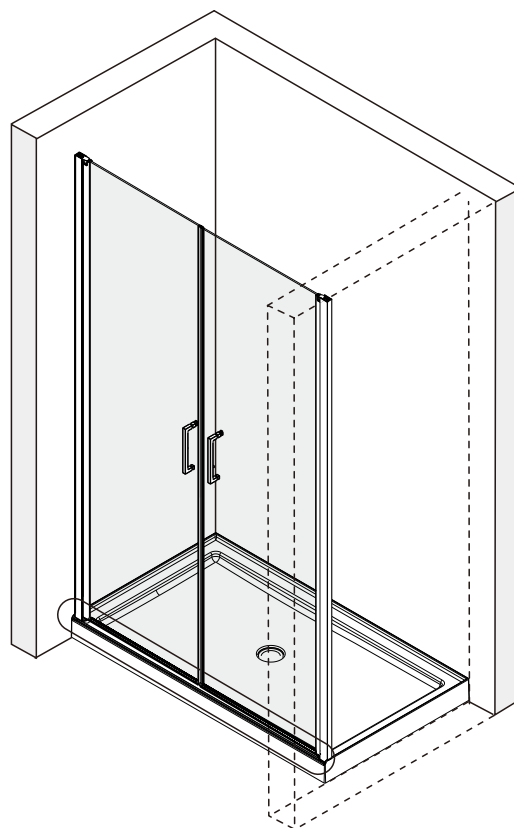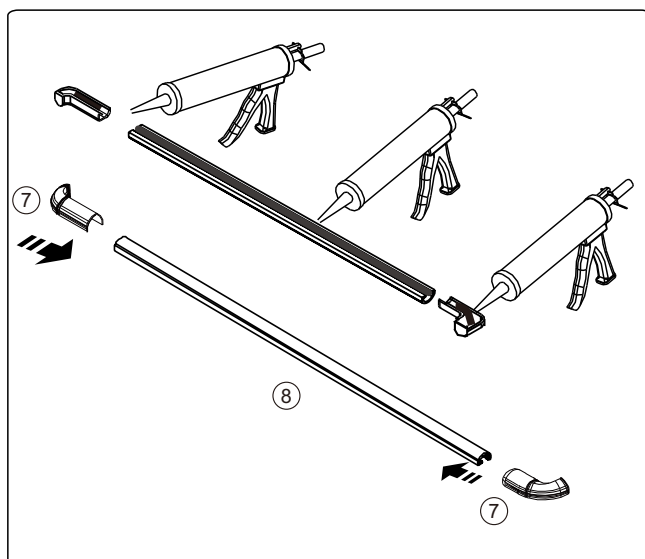

SUITE / CONTINUED

A 10

